


**A. Sedan**


**Removal**

---

- 1 Remove door liner (72–100).
- 2 Remove inside door controls (72–230).
- 3 Remove outer door grip (72–240).
- 4 Unscrew bolts on door lock.

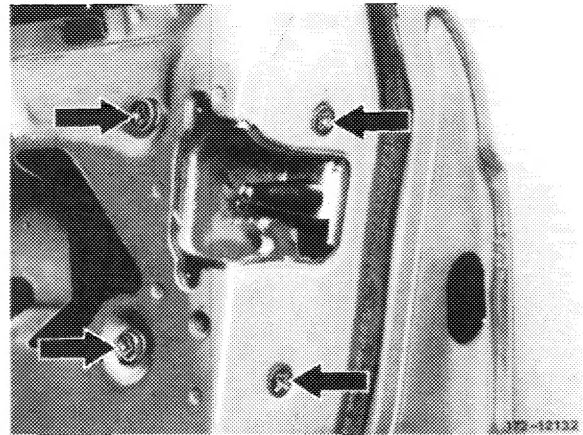


- 5 Remove door lock with cover from door downward.

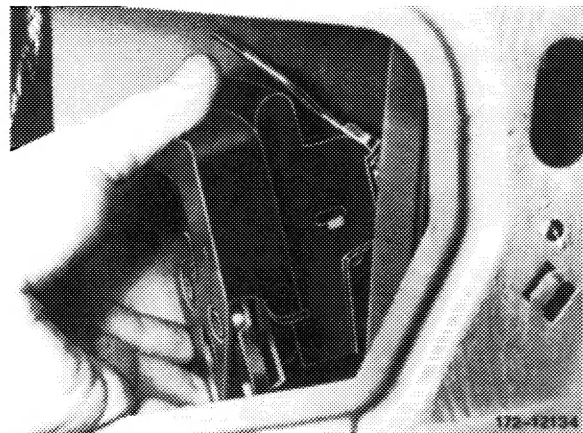

**Installation**

---

- 6 First tighten both visible mounting screws on face and then the screw on inside door panel to 8 Nm (0.8 kpm).
- 7 Continue installation in reverse sequence of removal.

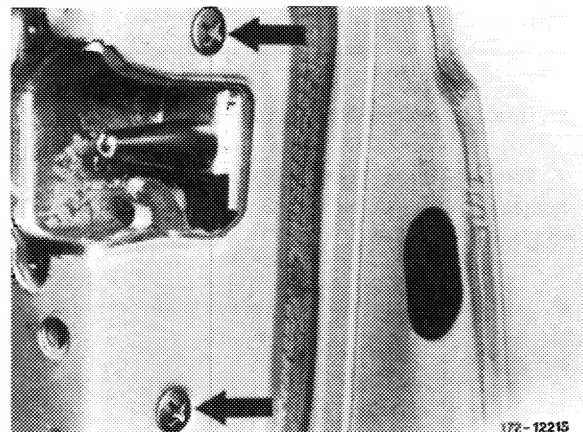

## B. Coupe


### Remove

---

1 Remove inside door controls (72–230, section B).


2 Remove outer door handle.

3 Unscrew screws at door lock.

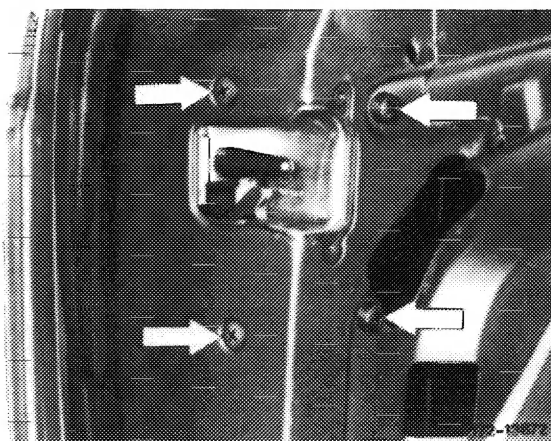

4 Lower door lock and swing to the **front** around the rear guide rail.

5 Remove door lock with cover from door.

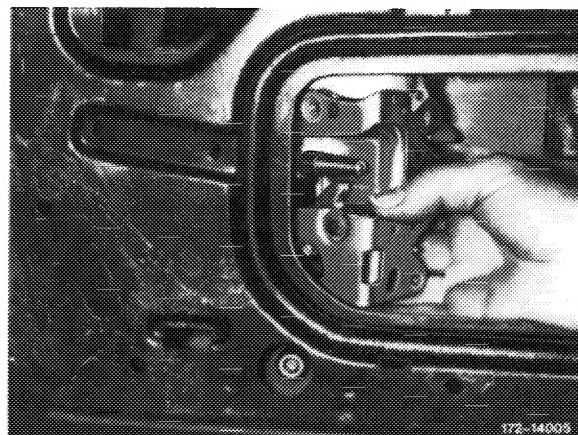

### Install

---

6 Insert door lock from below into the door.

7 First tighten the two visible attaching screws at the face and then those at the door inner panel with 8 Nm (0.8 kpm).

8 Further installation takes place in reverse order.

